
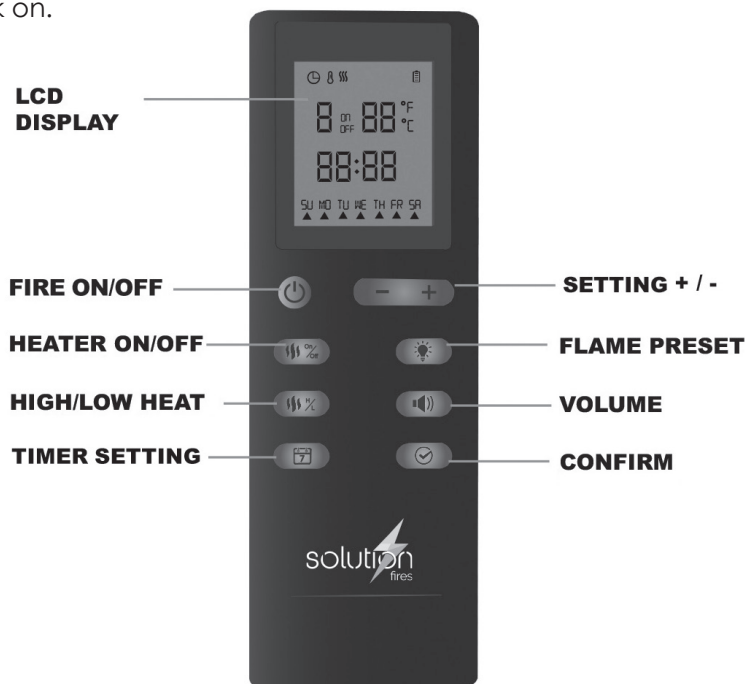












## Electronic Remote Control Quick Start Guide

- **Ensure power on/off switch located at the right hand top of the front glass panel is switched to on.**
- **NOTE:** The remote control handset uses an Infra-Red beam (not a radio frequency) and therefore must be directly pointed at the centre of the appliance.
- **TURNING FIRE ON/OFF** - Press the coloured  button to switch the fire on and off.
- **NOTE:** If you have turned the fire off using the manual switch on the fire the handset will not recognise this has happened and will think that the fire is still on. You can see this has happened if the fire is off but the display on the handset is still illuminated. In this instance pressing the on/off button on the handset will turn the handset off and then pressing the on/off button again will turn fire & handset back on.



- **NOTE: Handset Sleep Mode** – After about 25 seconds the handset will go into sleep mode to save battery life. To reactivate handset press any button (except on/off) THEN press your desired control buttons.
- **HEAT On/Off** – Press Heater On/Off  button which will enable the High/Low heater control. A  will be displayed at the top of the screen. Now press the High/Low  heater control button once for 1kw of heat or twice for 2kw of heat. The handset screen will display H 01 & H 02 respectively. To turn heaters off simply press the Heat On/Off  button.
- **Crackling Sound Control** – Press the . The screen will show the current volume U 00 – U 05. Press the +/- buttons to select desired volume. Press confirm  button.
- **Ambient Mood Pre-sets** – Press Flame Pre-set  button. The screen will show the current Pre-set P 51 – P 56. Press the +/- buttons to select desired Pre-set. Press confirm  button



## Common User Errors

- Power On/Off switch not on.
- User isn't pointing handset at fire.
- User presses 'power off' button but doesn't point handset at fire.
- Remote screen goes off but fire will stay on.
- User needs to press power again - turning handset back on.
- Repeat the process pointing remote at fire.