


Generation 2 Remote Handset Instructions

Remote Control Buttons and Display

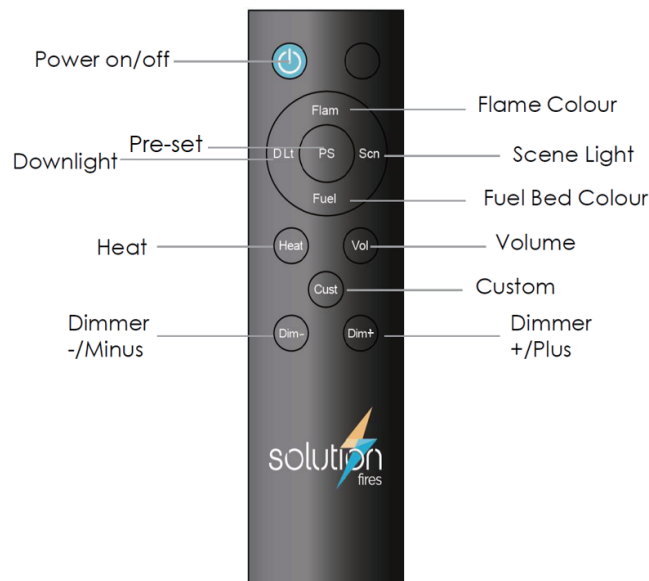

Flame Colour - Flam

Press the Flam button to cycle through the 9 flame colours and off

Down Light Colour - D Lt

Press the D Lt button to cycle through the 9 down light colours and off

Scene Light Colour - Scn

Scene lighting is an optional extra and this button will only operate if the Scene lights have been installed.

Press the Scn button to cycle through the 9 scene light colours and off.

Fuel Bed Colours - Fuel

Press the Fuel button to cycle through the 9 fuel bed colours and off

NOTE: If you have turned off all but one of the lighting elements, you will not be able to turn off the last one using these buttons. This is for you to know that your fire is still powered on.

Custom Setting - Cust

Using the 4 buttons detailed above, select your desired fire colours and then hold down the Cust button for 4 seconds. This will enable you to recall that setting each time you momentarily press the Cust button. To overwrite your setting, simply choose another set-up for your fire and hold down the Cust button for 4 seconds.

Dimming Buttons - Dim- and Dim+

Use these buttons to set the brightness level of your fire.

Flame Preset - PS

Press the Flame Preset button to cycle through the 6 factory set preset lighting options.

Volume - Vol

Press the Volume button to cycle through the volume settings from off to loudest, back to off .